



VERTICAL CABLE

DESCRIPTION

I-Punch Termination Tool for CAT5E, CAT6, CAT6A V-Max Keystone Jacks
"The Most-Wanted Tool in the industry"

FEATURES

- Compatible with Vertical Cable CAT5E, CAT6, CAT6A V-Max keystone jacks – no separate dies or blades needed
- Mechanically stabilized heavy-duty ratcheted mechanism
- Durable low-carbon cold-rolled steel construction
- Unique design makes termination easy and fast
- Storage option – integrated locking yoke
- Lifetime warranty
- TAA-Compliant (Made in Taiwan)

00:00:18 SEC
TO TERMINATE
A KEYSTONE JACK

WITH I-PUNCH TOOL BY VERTICAL CABLE



I-PUNCH TOOL FOR V-MAX KEYSTONE JACKS

078-2150

CHARACTERISTICS

Handle:	0.08 in. (2 mm) low-carbon cold-rolled steel thermoplastic rubber
Jack Holder:	0.08 in. (2 mm) low-carbon cold-rolled steel
Mechanism Casing:	0.08 in. (2 mm) low-carbon cold-rolled steel
Steel Hardness:	HR30N 55-65
Crimping Mechanism:	Ratchet

DIMENSIONS

Position	Height	Length	Width
Locked Position:	9.37 in. (238 mm)	2.4 in. (62 mm)	1.18 in. (30 mm)
Open Position:	9.1 in. (232 mm)	5.5 in. (140 mm)	

WEIGHT


1.1 lb. (498 g)

COMPATIBILITY

CAT5E V-Max Keystone Jacks | **351 Series**

CAT6 V-Max Keystone Jacks | **352 Series**

CAT6A V-Max Keystone Jacks | **353 Series**

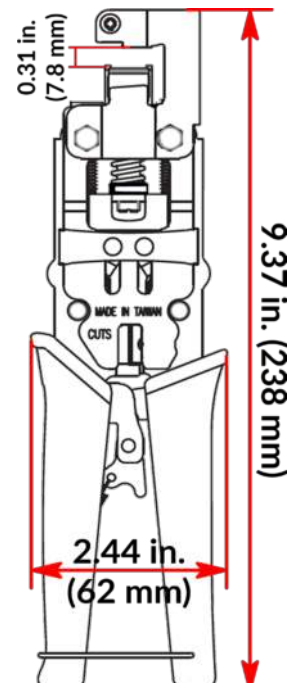

* 18 seconds - is the best time in the "Terminate That Jack" Tournament

Florida (HQ)
800-749-2447

California
951-696-7772

New York
845-391-8318

Texas
713-322-7242

p. 1/2

verticalcable.com

This specification sheet is subject to change without notice.





Rev. 12/2025

TERMINATION INSTRUCTIONS

V-MAX KEYSTONE JACKS & I-PUNCH TOOL



CAT3: 300 & 350 Series | CAT5E: 301 & 351 Series | CAT6: 302 & 352 Series | CAT6A: 303 & 353 Series
I-Punch Tool: 078-2150 (Designed for All Unshielded Keystone Jacks by Vertical Cable)

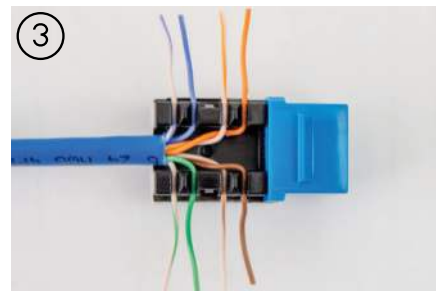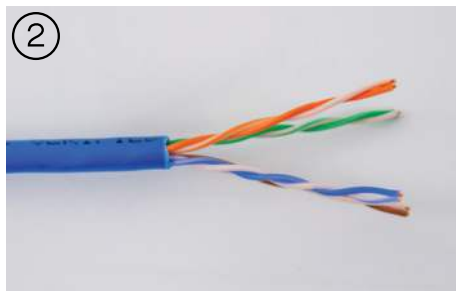

- ① Remove up to 2 inches of the jacket from the cable with a cutter or a stripper.
- ② Separate all twisted pairs from each other. Preserve the wire pair twists as close as possible to the point of termination.
- ③ Determine the wiring scheme and properly align all four cables accordingly on the jack. Keep the cable jacket as close to the connector as possible.



- ④ Insert prepared jack & cable assembly into the I-Punch Tool
- ⑤ Firmly squeeze the handles together, release the handles and repeat this step to ensure a proper termination.

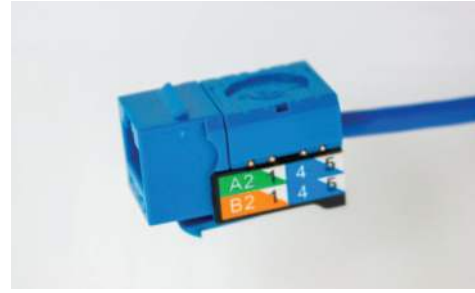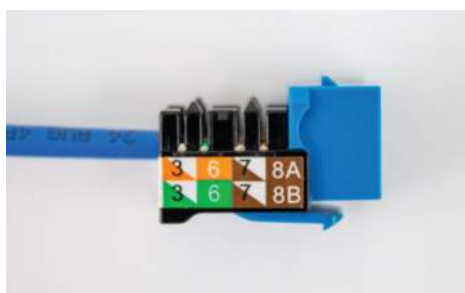

Termination is complete.

Watch
Video
Here



Florida (HQ)
800-749-2447

California
951-696-7772


New York
845-391-8318

Texas
713-322-7242

p. 2/2

verticalcable.com

This specification sheet is subject to change without notice.



Rev. 12/2025